


Stock Gate Removal

1. Locate and unplug the 4 wires that connect to the existing 2 bulbs at the top of the stock gate. (Red boxes in figure 1)
2. Locate and remove the two Philips screws holding down the stock gate. You will use these to reinstall the new gate. (Green arrows in figure 1)

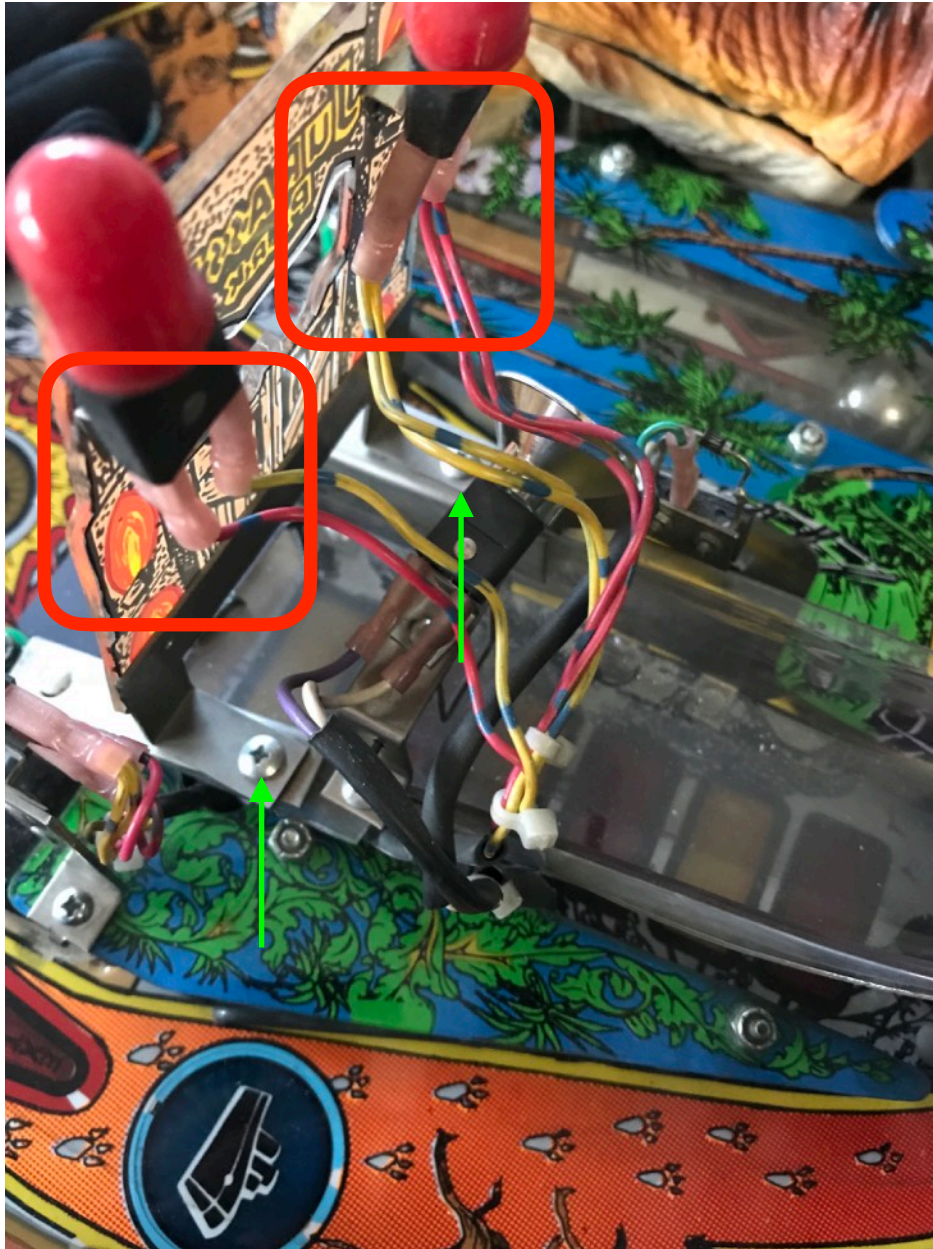

(Figure 1: Stock Gate)

New Gate Installation

1. Screw down new gate in place using existing screws.
2. Make the 4 connections as shown in Figure 2.
 - Yellow/blue wire on the machine -> connector with resistors on the gate (typically the longer of the two wires)
 - Red/blue wire on the machine -> connector without the resistor on the gate
3. If for some reason this doesn't work, you can try and reverse the connection (this changes the polarity).



(Figure 2: Connections to the new Gate)